



Outdoor All Weather Cover







Fitting the all weather cover

Included with the cover is a round plastic cap. This is designed to sit on top of the flue spigot adaptor to protect the cover from any sharp edges when in use.

The all weather cover is designed for use once the Outdoor flue system has been removed from the fire.

Removal of the Outdoor flue system

We recommend using two people to remove the Outdoor flue system from the Outdoor fire.

- 1. Undo the two rear M6 dome head screws using the 4mm hex key that was supplied with your Outdoor fire. Make sure the flue system is supported and doesn't fall over. Move to the front of the fire and undo the front M6 dome head socket screw. The flue system is now ready to be removed.
- 2. With two people standing at the front of the flue lean it towards you making sure the inner 150mm flue pipe lifts out of the flue spigot adaptor. Make sure the second person is ready to support the weight of the fuel system and cowl. Place the flue carefully on the ground to avoid any surface/coating damage. You can now disassemble the flue system for storage.

Outdoor 850B and 850P models

Place the all weather cover over your fire with the velcro straps hanging down at the front of the fire. Feed the three velcro straps under the base heat shield of the fire. Pull the straps up the rear of the cover and secure each strap firmly.

Outdoor 850T

Place the all weather cover over your fire with the velcro straps hanging down at the front of the fire. Feed the three velcro straps under the base heat shield of the fire but above the top heat shield of the stainless steel trolley. Pull the straps up the rear of the cover and secure each strap firmly.



Place the plastic cap over the flue spigot adaptor



Feed straps through under the base heat shield of the fire and above the top heat shield of the trolley



Pull the straps up the rear of the cover and secure each strap firmly.