

Wood Stack Assembly Instructions

Wood Stack components


- 2x steel side panels
- 1x steel base panel
- 2x steel support brackets
- 4x M6 x 12mm bolts
- 4x M6 dome head nuts
- 4x plastic bolt head covers

You will also require the following tools for assembly:


- 10mm socket or ring spanner



Step 1

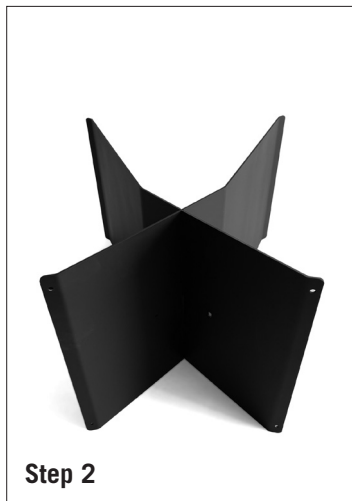

Step 2

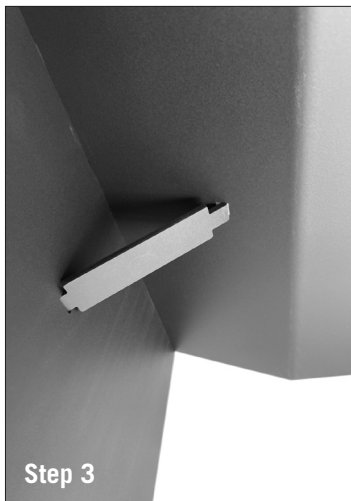

Step 3



Step 4

Align the notches in each steel side panel at 90° and then carefully slide the two panels together to form a basic X shape.

Once formed correctly the side panels will be flush at the intersection point and will need to be spread slightly to fit the support brackets.

Place the two steel support brackets through the slots in each panel spreading the side panels as needed for easy placement.

Fit the base panel to the assembled side panels. You may need to apply slight pressure on the side panels to align the fixing holes.



Step 5



Step 6

Fit the bolt through the plastic bolt head cover, base panel and side panel and finger tighten only. Complete for all four fixing holes.

Once all four fixings are in place, tighten each with the 10mm socket or ring spanner. Do not overtighten. Clip the plastic bolt head cover closed.

